

USER'S MANUAL

SAB EXPLORER PVR SC



Please read this User's Manual carefully.
The menu structure and specification can be changed without notice.

Contents

General Information	3
Safety and Precaution	3
Accessories	5
Remote Control Unit	6
System Connection	7
Front Panel	7
Rear Panel	8
Connecting your System	9
Recommended Antenna Connection	11
Time Setting	13
Menu Structure	14
Menu Guide	15
Installation	15
Channel Manager	22
PVR Manager	24
System Setup	27
Common Interface	31
Utility	33
Functions Guide	35
Program Guide	35
Timeshift	36
Bookmark	36
Repeat	37
List Menu	38
STB Teletext	38
Function keys	39
Change the Attributes of a service	39
Specification	40
Trouble Shooting Guide	43

General Information

Safety and Precautions

Thank you for purchasing the digital satellite receiver.

For your safety and proper operation, please take time reading this manual fully before installing and operating the receiver.

We hope you will be able to take advantage of the numerous functions with the help of this manual.

◆ **MAINS SUPPLY**

Use only 100 - 250VAC 50/60Hz.

◆ **OVERLOADING**

Do not overload a wall outlet, extension cord or adapter as this may result in fire electric shock.

◆ **LIQUIDS**

Do not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

◆ **CLEANING**

1. Always disconnect the STB power cord from the outlet before cleaning.
2. Use a light damp cloth (no solvents) to dust off the STB.

◆ **VENTILATION**

1. The slots on top of the STB must be left uncovered to allow proper airflow to the unit.
2. Do not stand the STB on soft furnishings or carpets.
3. Do not expose the STB to direct sunlight or do not place it near a heater.
4. Do not stack electronic equipments on top of the STB.
5. Do not use this appliance in airtight area.
6. Do not open the top cover.

◆ **CABLE**

Use standard certified cables to prevent any malfunction of the STB.

General Information

➤ Safety and Precautions

◆ ATTACHMENTS

Do not use any attachments that are not recommended as these may cause hazard or damage to the STB.

◆ CONNECTION TO THE SATELLITE DISH LNB

Disconnect the STB from the mains before connecting or disconnecting the cables from the satellite dish.

Failure to do so can damage the LNB.

◆ CONNECTION TO THE TV

Disconnect the STB from the mains before connecting or disconnecting the cables from the TV.

Failure to do so can damage the TV.

◆ EARTHING

The LNB cable MUST BE EARTHED to the system earth for the satellite dish.
The earthing system must comply with SABS 061.



◆ LOCATION

Place the STB indoor in order not to expose to lightening, rain or sunlight.

◆ SERVICING

1. Do not attempt to service this product yourself.
2. Refer all servicing to qualified service representatives

NOTICE : The power remains on even when the switch is turned off.

WARNING RISK ELECTRIC SHOCK DO NOT OPEN	TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER(OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.
 This symbol indicates "dangerous voltage" inside the product that presents a risk of electric shock or personal injury.	 This symbol indicates important instructions accompanying the product.

General Information

➤ Accessories

Check the following accessories when you open the box



User's Manual 1 ea.



RCU 1 ea



RF Loopthrough cable 1 ea.




Batteries 2 ea.

The device, packaging material and batteries must never be disposed of with household.

Please obtain appropriate information about regulations in your community, and dispose of all in accordance with regulations at the separate locations provided.

Remote Control Unit

STANDBY (Power) Power On/Off, Standby		M (MUTE) Enable or disable audio	
NUMERIC KEYS : Select channels by channel numbers or enter programming parameters.	TV/SAT Receiver switches between TV and Satellite receive mode.	Back (PREVIOUS) Return to the previous menu, status or channel	VOL (VOLUME) Increase or decrease the volume.
TV / RADIO Receiver switches between TV and Radio mode.		EPG Display the TV/Radio Electric Program Guide	INFO (INFORMATION) Display channel status or various program information of current service.
PG UP/DOWN Move up/down the cursor		CH UP/DOWN Tune to the next or previous channel. And move up or down highlight marked cursor.	EXIT Cancel the user selection
VOL (VOLUME) Increase or decrease the volume. And move left or right highlight marked cursor.		SLEEP (Blue Key) Operate sleep mode	TEXT (Yellow Key) Show Teletext
LIST/OK Select menu option, or to updated on entry and to enter List menu		FWD Fast forwards a programme.	STOP Stop a programme.
MENU Display the Main Menu		F.SKIP Skip a programme backward (Default interval : 10 seconds)	PAUSE Pause a programme
AUDIO (Red Key) Select audio mode (left, right, stereo, language)		PAUSE Pause a programme	Book.M Bookmark key
SUBT (Green Key) Display subtitle contents		Book.J Bookmark jump key	Sat list View a satellite list
REW Rewind a programme.		SLEEP Operate Sleep mode.	
PLAY Play a programme.			
R.SKIP Skip a programme backward (Default interval : 10 seconds)			
REC Record a programme	FAV (Favorite) Set receiver to favorite service mode, display the favorite channel.		
CAPTURE Capture current image			
REPEAT Repeat a section			

System Connection

➤ Front Panel



◆ 2 LED Display

- Stand by LED : It shows Red LED when the power is off.
- REC by LED : It shows GREEN LED when a program being recorded.

◆ **Normal Display** : It shows 4 digits of Channel number when the power is on. But it shows current time in Standby mode.

On : "run" is displayed on the LED Display panel and shows the current channel number.

Standby : You can see the clock works.

◆ **Tact switch** : Standby, CH UP/DOWN , VOL UP/DOWN . MENU , OK


◆ **Common Interface slot**

NOTICE :

1. **Current time is based on the TDT(Time and Date Table) at the stream of the current service. If the TDT information is not correct, current time might be incorrect.**
2. **Please do not insert metal or alien substance into the slot for the modules and Smartcards. In doing so can cause damage to the STB and reduce its life span.**

System Connection

➡ Rear Panel

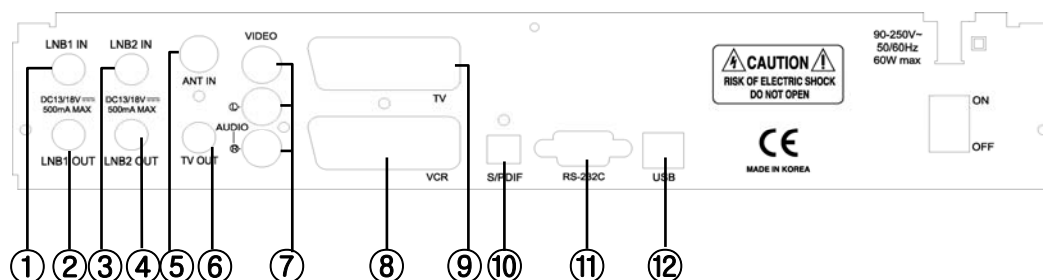


Please refer to the diagram above for all possible connections of your receiver

Do not connect the unit to the mains socket until all other connections have been made and checked.

- 1) **LNB1 IN** : This port is to connect the coaxial cable from LNB of your Dish.
- 2) **LNB1 OUT** : This enables the connection of an Analogue receiver.
- 3) **LNB2 IN** : This port is to connect a satellite antenna cable or connect LNB 1 OUT.
- 4) **LNB2 OUT** : This enables the connector of an Analogue/Digital receiver.
- 5) **ANT IN** : This is used to connect the analogue antenna input.
- 6) **TV OUT** : This is used to connect your TV through RF cable.
- 7) **VIDEO** : This RCA connector is used to connect your TV through RCA cable.
AUDIO R/L : These RCA connectors are used to connect your TV through RCA cable or any external audio amp or system.
- 8) **VCR SCART** : This Scart connector is used to connect any external video.
- 9) **TV SCART** : This is used to connect your TV through Scart cable
- 10) **S/PDIF** : This is used to connect with Digital audio amplifier (Optional)
- 11) **RS 232C SERIAL PORT** : This is used to connect your receiver with a computer or other STB through a serial cable.
- 12) **USB** : PC to STB, STB to PC data transfer and receiver (Optional)

System Connection

➤ Connecting Your System

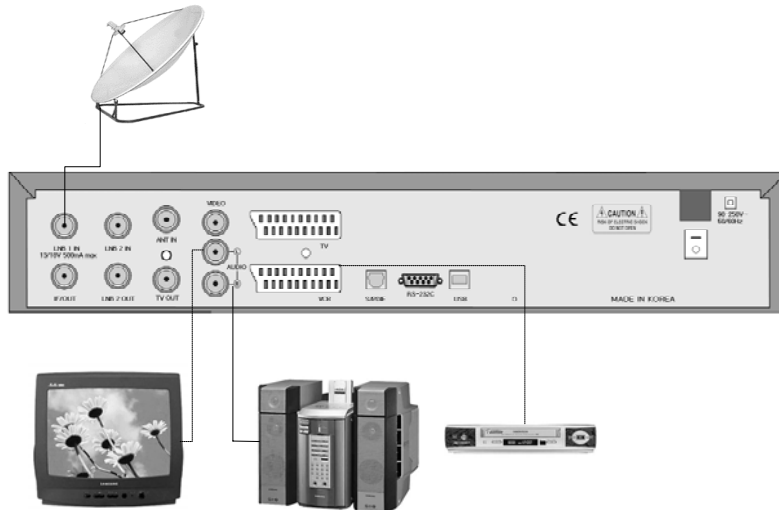

◆ TV Only

There are two ways to connect the STB to your existing TV system. We recommend using one of the following cases for the best result :

- Connect one end of RCA cable to the RCA jack on the back of the STB and the other end to a RCA jack on your TV.
- Connect one end of Scart cable to the Scart jack on the back of the STB and the other end to a Scart jack on your TV.
- Finally connect the coaxial cable from the LNB to the LNB IN jack on the STB.

◆ With External Audio / Hi-Fi System

- To connect any external Audio Hi-Fi system, the receiver has been provided with two RCA connectors at the back of the receiver marked with Audio L and R.
- Connect an RCA stereo cable from the AUDIO L, R jacks on the back of the STB to the LINE, AUX, SPARE OR EXTRA input jacks on your Hi-Fi System.

◆ TV with VCR

- Connect one end of Scart cable to the Scart jack on the back of the STB and the other end to a Scart jack on your VCR.

System Connection

✚ Connecting Your System

◆ *TV with Motorized System (DiSEqC 1.2)*

There are two ways to connect the STB to your existing TV system. We recommend using one of the following cases for the best result

- Connect one end of RCA cable to the RCA jack on the back of the STB and the other end to a RCA jack on your TV.
- Or connect one end of Scart cable to the Scart jack on the back of the STB and the other end to a Scart jack on your TV.
- Connect one end of your coaxial cable to the LNB IN connector on the STB and the other end to the REC or Receiver connector on the DiSEqC 1.2 motor.
- Connect the coaxial cable from the LNB to the LNB connector on the DiSEqC 1.2 motor.

◆ *Reference*

DiSEqC 1.0 Connection

All our receivers are designed to be DiSEqC 1.0 and DiSEqC 1.2 compatible. This allows multiple antennas to be connected to the STB at the same time.

If you have two or more fixed antennas or LNBs, then we recommend you use a DiSEqC 1.0 switch.

Connect the coaxial cable from the first LNB to the LNB 1 or LNB A input connector of the DiSEqC switch.

Do the same for any other LNBs that you have.

Connect one end of a coaxial cable to the RF output connector of the DiSEqC switch, connect the other end to the LNB IN socket on the STB.

To the digital receiver, you can connect either a single satellite antenna directly or LNB of multi-feed equipment.

USALS System

When it comes to USALS System, please refer to Page 17.


System Connection

➤ Recommended Antenna Connection

◆ *When you set the PVR to Loop Mode.*

1. When a user has one antenna.


Input a single source to Tuner A, and input the output signal from Tuner A to Tuner B using a splitter or loop through.

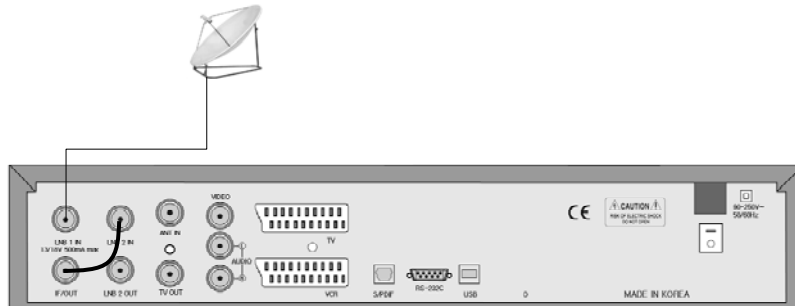

2. When a user has two antenna.

Connect two antennas to DiSEqC and input the outputs to Tuner A. Then input the output signal from Tuner A to Tuner B using a splitter or loop through.

Note: A splitter is recommended in the single mode. (For Tuner A, use a splitter with the function of DC bypass, and for Tuner B use a splitter regardless of the function of DC bypass.) Otherwise, it is recommended to use a splitter. Use only a splitter in order to connect another set-top-box using a loop through to your PVR.

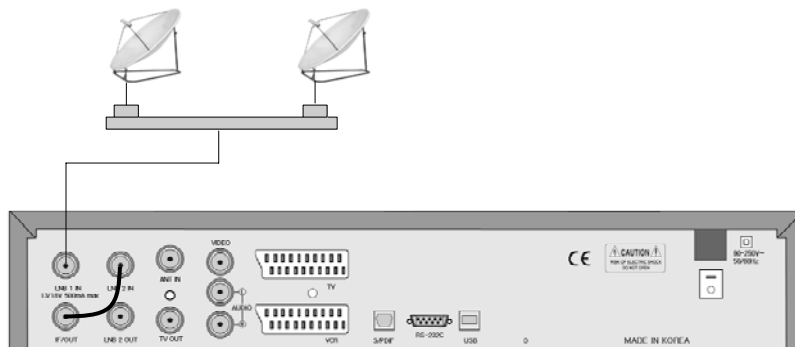


(Satellite A)

System Connection

➤ Recommended Antenna Connection


◆ When you set the PVR to Dual Mode.

To provide Live and Timeshift services, and Recording service through Tuner A or Tuner B, input a signal source of the same attributes with the signal input to Tuner A to Tuner B.

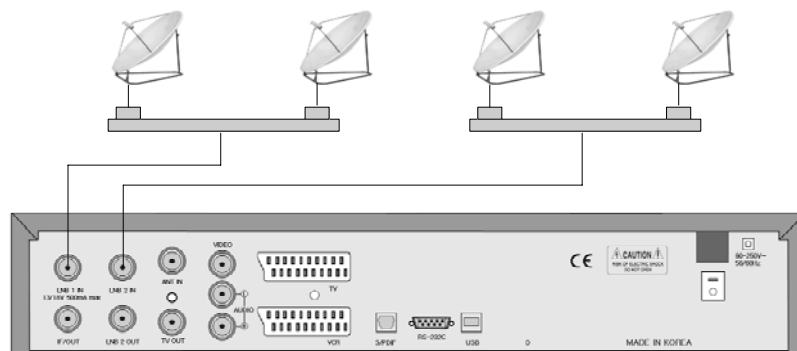

◆ When you set the PVR to Split Mode.

Tuner A & Tuner B are activating separately in this mode.
Connect two antennas to each tuners.

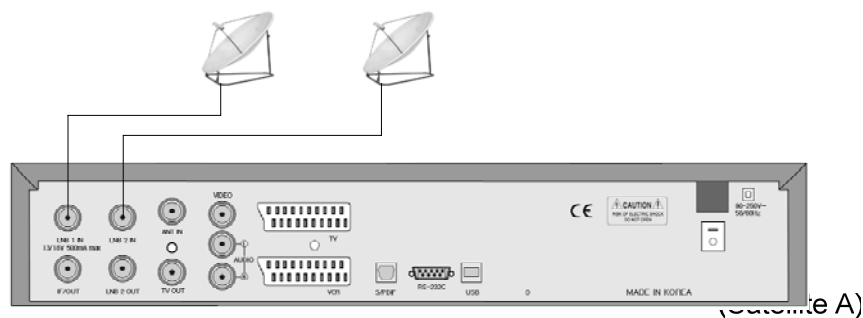

Setting Up Your System

➤ Time Setting

Time Setting enables you to set your local time, manage time on the basis of your standards.


When you initially power on, enter the Time Setting menu, and you set the local Time, your STB will provide all services based on the initial set time.

In order to set an initial time, set date/month/year/hour/minute.

After setting the initial time here, you can also change the time in Time Setting of Main menu. When plugged out and re-plugged in, you need to set your Local time again.



Menu Structure

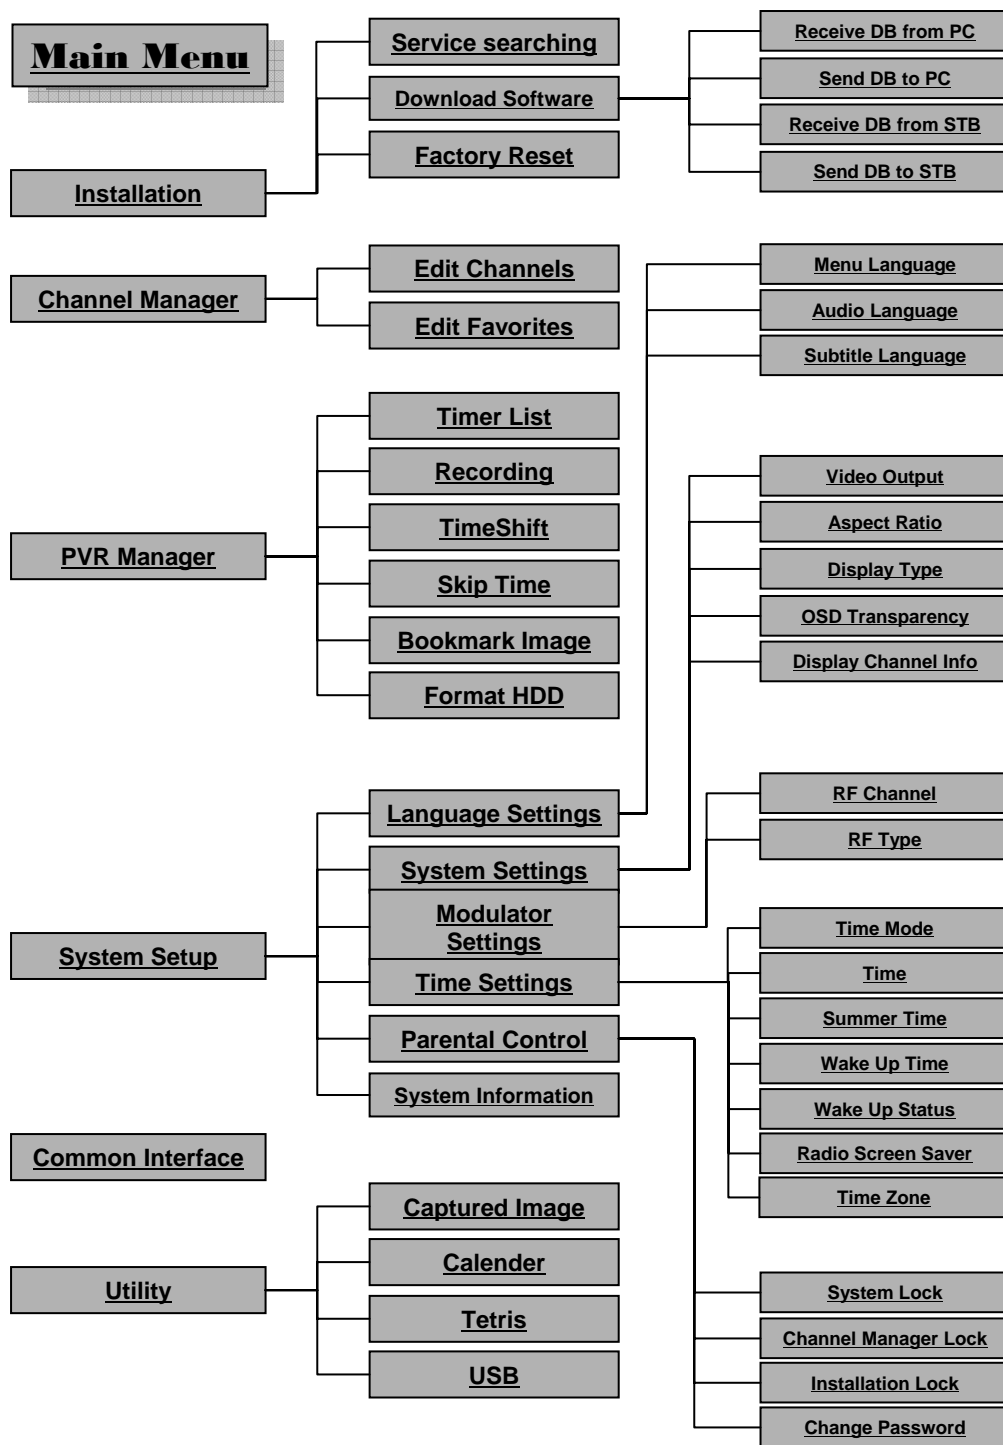

Menu Guide :

➤ Installation

◆ Service Searching

Edit

Place the cursor on the satellite which you want to edit and press the “Red” key to move satellite edit menu.

1) Tuner Select

PVR has two tuner input. You can select either one



2) Ant Connect

You can select antenna connection mode.
Loop / Split / Dual mode support

3) LNB Power

Depending on the type of LNB cling to your antenna, you can supply either LNB power by setting “On” or not by setting “Off”.

4) LNB Frequency

You can select the predefined Local Frequency (0...9, One Cable1/2 , 5150, 9750, 10600, 10750MHz or Universal) by pressing the ◀▶ keys or manually enter a specific frequency in MHz unit by pressing the numeric keys.

You can input the number only when it displays “0...9”.

Menu Guide :

➤ Installation

◆ Service Searching

Edit

1) 22KHz

In case you are using a Dual LNB or two antennas connected to a 22KHz tone switch box, make 22KHz tone switch Enable or Disable to select LNB or antenna.



2) DiSeqC

DiSeqC must be used when using two or more antennas and LNBs.

Select None, DiSeqC 1.0 , DiSeqC1.1 , MOTOR and USALS.

3) Committed

Set the port number of DiSeqC 1.0 switch

4) UnCommitted

Set the port number of DiSeqC 1.1 switch.

5) Save

After Setup complete, Press "RED" key to save

Menu Guide :

➤ Installation

◆ Service Searching

Edit

* When selecting “**MOTOR**” Yellow color key(in DiSEqC menu)

- **DiSEqC 1.2 Motor** : You can move the motor to the left or right by pressing the ◀▶ keys continuously, but when you stop pressing the ◀▶ keys, the motor will be stopped.
- **Save** : When you press the “**OK**” key, current position of the DiSEqC motor will be saved.
- **Go to Reference** : Move to the position “O”.
- **Calculation** : The difference between the current position and the new position of the current satellite is applied to all the other satellite also.
- **Limit** : You can set the maximum move extent. You can control “**Enable**” or “**Disable**” mode. When you select “**Enable**”, “**East limit**” and “**West Limit**” will be activated.
Press the “**OK**” key, then current position will be restored as each limit.
- **Reset** : After select the “Reset” and press the “**OK**” key, the original value of motor will be restored.

* When selecting “**USALS**” Yellow color key(in DiSEqC menu)

Input the value of latitude and longitude in which the dish-installer is placed.

As the satellite that you want to target was selected in the last menu, it is possible to press “**OK**” key in “**Rotate**”. Then the degree of an angle for rotate will be calculated automatically and the DiSEqC Motor will adjust to rotate the dish to the previously selected target satellite.

First of all, when you set this procedure, notice the following point, that is, the zero degree of DiSEqC Motor must be headed for the due North at initial setup state.



Menu Guide :

✚ Installation

◆ Service Searching

Rename

Select the satellite name you would like to rename and press the “OK” key.
By using the “BACK” buttons, Move to be previous menu. Press “BLUE” key to Save.

Scan

Select the satellite you want to scan by using the ▲▼ keys .
Press the “OK” key and Scan will begin. 7-Segment will display “SCAN”.

1) Network

If you want to have all other
Transponder information, you need to
Select network ‘ On ‘.

2) Search Mode

You can select ALL / FTA option
mode in each satellite by
Using the the ◀ ▶ keys.



STB will automatically search all TV/Radio channels from a satellite and save them into the Channel List.

You can see the progressive status of channel searching. Press the **Red** or **Exit** key to stop Channel Search.

When the Channel Search is completed, the result will be saved and the first channel of the searched ones will be displayed.

Notice : Please wait for the receiver to process all the channels, and note that the “Channel Search” procedure may take a few minutes.

Menu Guide :

➤ Installation

◆ Service Searching

Transponder

1) Edit

- Press the red key to change the parameter values of the selected transponder.
- Place the cursor on the sub menu by using the ▲▼ keys and press the ◀▶ keys or “NUMERIC” key to change the setting.
- Insert the frequency of the transponder you want to edit.
- Select the polarization of the transponder you want to edit (**Horizontal / Vertical**) .
- Input the symbol rate of the transponder you want to edit.
- Select the FEC (Forward Error Correction) of the transponder you want to edit.



2) Add

If you cannot find the desired transponder from the transponder list, you can add it by inputting appropriate parameter values for a new transponder.



Menu Guide :

➤ Installation

◆ Service Searching

Transponder

3) Scan

If you cannot find it from the transponder list, you should insert all the setting parameters.

If you want to have all other transponder information, select network "On".

You can also search a special channel of the specified transponder by specifying Video PID (Packet Identifier), Audio PID and PCR PID.

When you want to search a specified channel, please input the specified PCR PID with specified Video/Audio PID.

4) Delete

Press the "Blue" key to delete the selected transponders.



Menu Guide :

✚ Installation

◆ Download Software

To maintain the STB up-to-date, you can upgrade the DB of the STB via other STB and personal computer.


New versions of DB may include latest information on Satellites and transponders.

1.STB Upgrade

You can select “On” if you want to upgrade the software via satellite directly

2.STB Auto Upgrade

You can select “On” if you want to upgrade the software via satellite automatically.

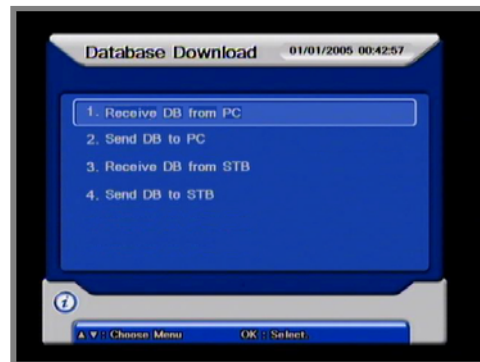

How to download Software(Set to Set)

1. Connect two STBs using RS232C cable.
2. The receiver which receives database select a “**Receive DB from STB**” mode
3. The receiver which sends database select a “**Send DB to STB**” mode.
4. Press the “OK” key

Notice : While downloading, don't turn off the STB. If the power turns off, turn on the STB and restart the downloading process again.

◆ Factory Reset

This mode is to restore the factory reset values.

After selecting 'Factory Reset', A warning message will be displayed.

If you press the “OK” key, all preset information will be formatted.(default vale: 0000)

NOTICE: This causes your previous settings to be deleted and default setting to be loaded.

Menu Guide :

➤ Channel Manager



◆ Edit Channel

You can select, lock, delete, & move channel's position in the channel list.

Lock

- You can select the channels that you want to lock or unlock by using the ▲▼ keys. And press the Red key to confirm your selection.
- Press the Green key to lock selected channels.
- Once the program is locked, you can not watch the locked channel till you change the configuration from “**Lock**” to “**Unlock**” in the channel edit menu or List Menu.
- The symbol of “**Lock**” is marked at the right side of the channel name on the “Channel Edit” List.
- On the other hand, the locked channel is displayed with the symbol “**Lock**” on the Information screen.

Delete

Select the channel name, and press the ‘**YELLOW**’ key.

By using the “**EXIT**”, “**BACK**” keys, move to be previous menu.

Move

Press the “**BLUE**” key to select the channel that you want to move its position of, and place the cursor on the position where you want to move it by using the the ▲▼ keys and press the “**OK**” key to confirm.

Menu Guide :

➤ Channel Manager

◆ Edit Favorite

Sorting

Press the **"RED"** key and the following "Program Sorting" menu screen will be displayed.

You can rearrange the lists by satellite, FTA / scramble, or alphabetically.

Register

Before you can use the "Favorite Channels List", you must first register your favorite channels into the favorite list.

- Select the desired list by pressing the **"Fav"** key.
- The Favorite Channel List can be sectioned into five categories from Fav A to Fav E.
- The list screen is divided into two, the list on the left displays all channels available and the list on the right displays selected favorite list.
- You can select the channels that you want to register into favorite groups by using the **▲▼** keys. And press the **"OK"** key to confirm your selection.
- Press the Green key and the selected channels will be added to each group of the favorite channel list.
- Same channel can be selected for each favorite group simultaneously.

Fav-Rename

Press the **"YELLOW"** key to change the name of Favorite Group, then the following "Favorite Rename" menu and keyboard screen will be displayed.

Use the **▲▼** and **◀▶** keys to place the cursor on the desired character and press **"OK"** key to select.

Delete

You can also delete channels from the favorite channel list by pressing the **"BLUE"** key After selection by using the **▲▼** keys and press the **◀▶** keys change language.

The language of menu & subtitle or soundtrack will be changed to the selected language.

Menu Guide :

➤ PVR Manager

◆ Timer list

The Timer list function enables you to reserve a program recorded and view it using Reserve key.

You can seek the previously reserved channels.

Use the ▲▼ key to place the cursor on the desired location and press “OK” key to select.



Channel

Press “◀ or ▶” key and then, sub menu will be displayed.

Search channel using “▲▼” key and confirm it Using “OK” key.

Record

You can select either Record or View by using the “◀▶” key

Mode

You can select among Once/Daily/Weekly on the Record mode by using the “◀▶” key

Start Time / End Time

Set the start time and end time by pressing numerical buttons(0-9) in Day, Month,

Year, Hour,

Minute order. Edit the time using “◀▶” key, and confirm it using OK key.

Menu Guide :

➤ PVR Manager

◆ Recording

You can record using REC(●) key on Live screen or “RED” key on Recording menu screen .

The start time of recording is the current time, and the end time is automatically entered on Setting the duration time. You can set the duration time using “OK” key and “◀,▶” or “▲,▼”key, and rename the recording file. During the recording, you can stop it by using the Green key.



* How to use Playback function

You can find the list of the recorded files using “F.LIST” key, and play them using OK key. It is also possible to sort the recorded files by alphabetical and FTA channel order.

Trick mode

You can operate Trick mode when Timeshifting or playing a recorded program.

1. Pause

You can pause the screen using Pause (||) key.

2. Fast Forward/Fast Rewind playback

You can rewind fastly up to 4 times speed using REW(◀) key and forward fastly up to 8 times speed using FF(▶) key.

3. Slow Motion playback

Press the Pause (||) key, and then FF(▶) key or REW(◀) key to see slow motion with 5 steps.

Press Play (▶) key to resume the playback with normal speed.

4. Skip playback

Press the F.SKIP(▶|) key to forward skip. Press the R.SKIP (◀|) key to backward skip. 10sec ~ 60sec



Menu Guide :

➤ PVR Manager

◆ Time Shift

You can activate the time shift function by using “OK” key.
select “ON” or “OFF” by using the “◀▶” key.,and Press “OK” key to confirm.



◆ Skip Time

You can activate the skip time function by using “OK” key.
Skip time can be set by user (10/20/30/60/120 sec)




◆ Bookmark Image

You can activate the Bookmark by using “OK” key.
The Bookmarked image can be displayed with information bar by selecting ON/OFF



◆ HDD Format

The HDD format feature can not be activated while file Playback, recording or Timeshift. To go to HDD format, follow the steps below.
Main Menu→PVR manager→HDD format.
If you press OK key on an warning message, it shows “Enter Password” message. Enter the password, then it starts activation and HDD will be initialized.
After the format is complete, you have to restart STB

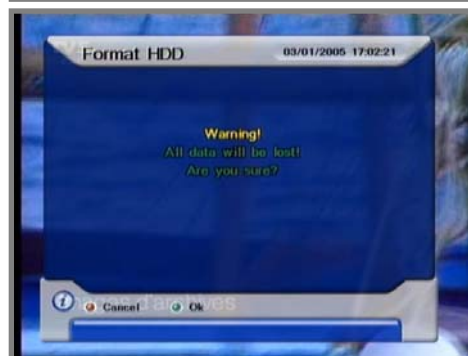

Menu Guide :

✦ System Setup

◆ Language Settings

To select the desired language of the Menu & Audio or Subtitle. Place the cursor on the sub menu by pressing the “▲,▼” keys and press the “◀,▶” keys to change language.

The Language of Menu & Audio or Subtitle will be changed to the selected language



◆ System Settings

1. Video Output

You can receive different TV output signal by selecting CVBS / RGB / YPbPr / S-VIDEO.

2. Aspect Ratio

Select the format of the video to be displayed on screen. You can choose either 4:3 ratio (Standard) or 16:9 (Wide) according to the TV type.

3. Display Type

select “FANSCAN” When the format of your TV set is 4:3
select “Letter Box” When the format of your TV set is 16:9

4. OSD Transparency

Set the level of OSD Transparency, it varies from 0 to 40.
Default : 10

5. Display Channel Info

Set the i-plate and play time, it varies from 0 to 10 sec. Default : 3 sec



Menu Guide :

➤ System Setup

◆ Modulator Settings

1. RF Channel

Select or change the RF channel number when the STB is connected to the TV by the RF jack. (Ch21~Ch69) Default : Ch38

2. RF Type

You can select the RF type by using the ◀ ▶ keys out of PAL B/G, I D/K.


◆ Time Settings

1. Time

You can set the Current Time (Local area time) in this mode.

To set the Current Time, select the value using the standardized information of current service area by pressing the ◀ ▶ keys.

The time setting will be used as the standardized time for the I-Plate, Program Guide and Sleep Timer.

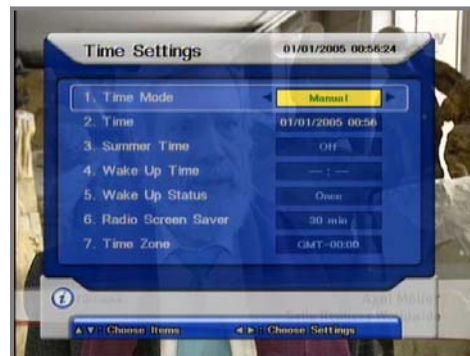

Current Time is based on TDT (Time and Date Table) at the stream of the current service.

2. Summer Time

You can set the summer time “On” or “Off”.

3. Wake Up Time

You can set the time for STB to be turned on automatically. STB will be turned on automatically at the time you set everyday, unless you erase the setting time.

4. Wake Up Status

You can select Once/Daily mode.

5. Screen Saver

It activates only in Radio mode without any window in TV screen after a default time passes, 30 minutes.

If you want to change the screen saver starting time, please follow the below steps.

Go to Main Menu → Select System Setup → Time Setting → Screen Saver

Note : Captured images display on TV screen in turns automatically.

6. Time Zone

Menu Guide :

➤ System Setup

◆ Parental Control

1. System Lock

To lock the receiver, select "System Lock" in the "Parental Control" menu and change it to the "On" mode by using the "◀, ▶" keys.

If the receiver is locked, whenever you try to start the STB, the "Password" screen will appear and you will be asked to enter your Password.

2. Channel Manager Lock

To lock the Channel Manager, select "Channel Manager Lock" in the "Parental Control" menu and change it to the "On" mode by using the "◀, ▶" keys.

3. Installation Lock

To lock the Installation Menu, select "Installation Lock" in the "Parental Control" menu and change it to the "On" mode by using the "◀, ▶" keys.

4. Change Password

You can change your Password from the factory default value "0000" as follows:

Select "Change Password" in the "Parental Control" menu.

You will then be asked for a new password.

Once you enter a new password, the system will ask you to re-enter for confirmation.

When you have entered a new password twice, the password has been changed.

If you forget the password, contact the distributor to recover it.




Menu Guide :

➤ System Setup

◆ System Information

Place the cursor on this sub menu and press the “OK” key.

It will show you the information of S/W & H/W version and provider.

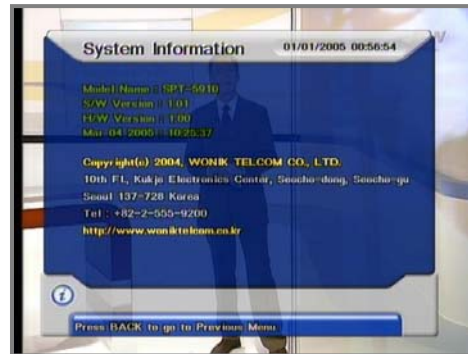

Menu Guide :

➤ Common Interface

You can enjoy not only scrambled services using the Conditional Access Modules (CAM) with smart card, but also Free-To-Air services.

This receiver is equipped with a twin-slot Common Interface under DVB specification, accepting two different types of PCMCIA modules. Plug in the appropriate CI module together with a valid Smart Card. You will then have access to the respective scrambled and pay-per-view services.

Each Smart Card contains your subscription details. You can view your entitlement via the CI option on the receiver's main menu .

This receiver currently supports seven kinds of CAM as follows.

Viaccess, Irdeto, Nagravision, Cryptoworks, Conax, Alphacrypt, SECA (Mediaguard)

◆ How to use your CAM and Smart card

Slide the CAM into the slot provided until the eject button is fully extended.

Insert the smart card into the CAM gently with the gold colored chip upwards

Ensure that these contacts are clean before inserting it into the CAM.

To remove the CAM out of slot, push the button on the right side of the CAM slot.

CAM and Smart Card depend on the service provider. If you need CAM, please contact your service provider or distributor.

NOTICE:

Both the CAM and Smart Card contain delicate electronic circuitry, please handle them with care when inserting and removing them from the receiver.

◆ Getting into CI mode through main menu :

Press Menu, and select Common

Interface from the main menu.

Menu Guide :

➤ Common Interface

You will see the next screen when you select “Common Interface” from the Menu.

For example ;

Slot 1 : Viaccess CAM is in the socket 1 and initialized

Slot 2 : CAM is in the socket 2 and your receiver is initializing the CAM.



The information available on the CI menu depends on the CAM provider.

Typically they will contain subscription information such as subscription duration, accessible programs, maturity level, network information etc.

◆ Getting into CI mode during viewing mode :

Following screen will be on your display when you slide the CAM with smartcard into the slot during viewing mode.

The message “Initializing the module..” indicate that your receiver is initializing the CAM.

If the scrambling type of current channel doesn't match up to the CAM and smartcard being initialized now, you will see the message “not available” on your screen.

Otherwise you can enjoy the scrambled services.




Menu Guide :

Utility

Captured Image

You can view the captured images, and edit the files on this menu.

The images can be captured by pressing Capture () key while watching .

1. View Image

Press “▲,▼” keys to choose the files, and OK key to view them.

2. Edit file

You can rename and delete the selected files.

Press Red key to choose the file and delete it using the Blue key, and rename then using the Green key



3. Screensaver

You can activate the screensaver function with the captured image while listening to a Radio channel. In Time setting menu, you can select On/Off and the interval time to start the screensaver function.

Main menu → System Setup→ Time Setting→Screen saver

Calendar

- ▼ : Previous Year
- ▲ : Next Year
- ◀ : Previous Month
- ▶ : Next Month



Menu Guide :

➤ Utility

◆ Tetris

- OK : Drop
- ▲ : Rotate
- ◀ : Move left
- ▶ : Move Right



◆ USB (Universal Serial Bus)

USB port hidden under a front flip enables you to transfer data the AV files, and captured image files from a built-in hard disc in STB to PC, and conversely from PC to STB. Once the USB cable is connected to the port, it displays "Connected" on the status of the USB menu. You need to install the USB application program provided from us in your PC. After that , you can feel free to utilize the wide variety of USB functions.



Functions Guide :

➤ Program Guide

Now / Next / Schedule / Information (EPG)

The information is only available from the transponder of the channel you are watching.

To see the titles of current & next program, press the Red & Green key.



You can see the program information that will be played for a week by pressing the Yellow key.

The information may include: current time, name of the Now and Next Program, the starting and ending time of the Now/Next Program and on-screen display window.

With the TV/RADIO/FAV keys you can browse among the various program lists.


Select the channel by pressing the "▲, ▼" keys and press the "OK" key to watch this channel. To see the extended information of program, press "i" key.

The extended information may include :

It shows the detailed information such as the actors, the providers .. etc.

Reservation Functions

1. Maximum 20 events can be reserved.
2. To reserved the channels you want,
 - 1) Select the reservation channel using "◀, ▶" keys.
 - 2) Select the type "Record/View."
 - 3) Select the mode "Once / Daily / Weekly".
 - 4) Set the Start and End time using numeric keys.
 - 5) Select "OK".
3. To cancel the reserved channels, select "Exit".

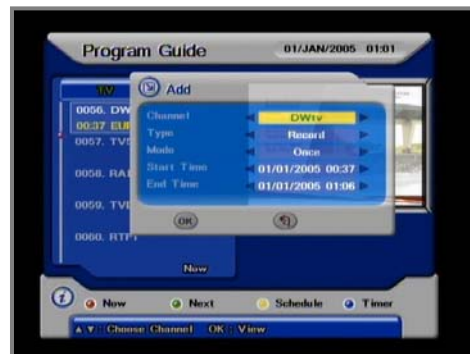

Functions Guide :

➤ Timeshift

In the Timeshift mode, recording and playback can be activated simultaneously. You can play back a Recorded program from where you missed.

1. To enable Timeshift, follow the steps below.

Main Menu → PVR Manager → Timeshift → Enable or Disable

2. There are two ways to activate Timeshift function. One is to pause at the point of program where you want to stop using Pause

(||) key, and the other is to play back to where you missed.

To go to the desired position, press REW (◀) key or FF (▶) key. Your position is displayed in information bar using " i " key. To remove the information bar, press Exit key.



➤ Bookmark

This function enables you to bookmark your favorite scene and repeat it as many times as you want.

You can jump to the position directly by bookmark function in playback and time shifted playback.

To search the positions quickly, you can use this function. You can bookmark maximum 10 positions and delete them by bookmarking the same position or the position within 10 seconds.

To go to the bookmarked positions, press "BOOK.J" key or "◀, ▶" key to move the bookmarked pictures and select "OK" key to go directly to the desired position.



Functions Guide :

Repeat

During the play, Institution period of file (A-B) play repeatedly.

There are three ways to activate repeat function

- 1) None : To disable repeat function.
- 2) All : repeat all of one file.
- 3) A-B : repeat the section between A and B.

Follow the steps below

- In the playback mode, Press the repeat key in RCU.
- Move cursor to the A-B, Using "▼", "▲" key. and press the "OK" key
- Press the "OK" key at the Start position
- Press the "OK" key when you are at the end position



SKIP

During the playback mode, You can skip the play position using "F.SKIP" and "R.SKIP"
Skip duration mode see page 26

Functions Guide :

✚ List Menu

This menu helps you to easily select the channel that you want to watch or edit.

To display the Channel List, press the “**List**” or “**OK**” key while you are viewing a program and you will see all channels that you saved into the channel list.

To watch a specific channel, first select it by pressing the “**▲**,” “**▼**” keys, and press the “**OK**” key to confirm.

You can also select a specific channel by pressing the numeric keys directly.

When you press “**i**” key in this menu, you can change the attributes (Lock, Favorite and Delete) of a service through the Service Configuration.

The symbol of “Lock” & “Scrambled” feature displayed on the Right side of the list stands for locked channel or scramble channel.

*The channel list can be constructed independently for each Satellite, Favorite Group, TV or Radio, by pressing the “**TV**,” “**RADIO**” or “**FAV**” keys*

1. When you press the “**◀ ▶**” keys, you can see and control the Channel List by each satellite.
2. When you press the “**TV/Radio**” key, you can automatically select TV and Radio Channel List.
3. When you press the “**FAV**” key, you can see each favorite channel list from A to E.



✚ STB Teletext

STB Teletext menu will be activated when you press “**TEXT**” key in the channel which provides Teletext service. If the channel doesn’t provide Teletext service, “**TEXT**” key will not be activated.

Teletext menu is composed of “Navigation Board, Status Board and Page Display Board”.

Functions Guide :

➤ Function Keys

Use the following color keys to display various service lists and the symbol of color key will be marked right above of the channel list:

- Red key : To display only Free to Air service list
- Green key : To display service list by alphabetical order
- Yellow key : To display all locked service list
- Blue key : To restore default service list

Use the following Option keys to display various service lists and the symbol of color key will be marked right above of the channel list:

- Red key : To display Bouquet service list
- Green key : To display SAT list
- Yellow key : To display all kind of CAS service list
- Blue key : To restore default service list

➤ Change the Attributes of a service

At the Channel Configuration you can change the favorite group, locking status and delete the channel.

To save the changes in Service Configuration, press the “**OK**” key when the cursor is at Lock, Favorite or Delete.

1. Select specific service you want to change the parameter values of in the Service List by using the “▲,▼” keys .
2. Press the “**I**” key and the Service Configuration screen will pops up.
3. Use the “▲,▼” keys to select the submenu you want to modify on the Service Configuration screen.
4. Use the “◀,▶” and “**OK**” keys to confirm.

Specification :

➤ Technical Specification

Conditional Access Interface

PCMCIA	2 Slots Common Interface
--------	--------------------------

Front End

Input Frequency	950~2150MHz
Input Impedance	75Ω
Connector	2xF-Type
RF Input Level	-65~-25dBm
LNB Control	DiSEqC 1.0 & 1.2, USALS
LNB Power	13V/18V (Max500mA with short circuit protection)
LNB Tone Switch	22KHz
Wave Form	QPSK (SCPC, MCPC capable)
Symbol Rate	2~45 MS/S

A/V Mode

Video	MPEG-II Main Profile/Main Level
Audio	MPEG-I Layer I&II
Aspect Ratio	4:3, 16:9
Audio Sampling Rate	32, 44.1, 48KHz
Audio Type	Mono, Dual Mono, Stereo, Joint Stereo
Graphic Display	720x576(PAL), 720x480(NTSC)

Specification :

➤ Technical Specification

Connectors	
TV SCART	CVBS, RGB,S-VIDEO, Audio L/R
VCR SCART	CVBS, S-VIDEO,Audio L/R
Audio Output	2 x RCA/Cinch
Composite Video Output	1 x RCA/Cinch
S/PDIF	1 x optic con. (Dolby Bitstream Out Available)
USB	USB 2.0 Compatible (Device/B-type)
RF Modulator	UHF I/O IEC male/female CH21~CH69(PAL B/G/I/D/K)
RS232C	9 Pin D-Sub RS232C serial port
General Characteristics	
Supply Voltage	100-250VAC, 50/60Hz
Power Consumption	Max. 60W
LED Display	4Digits (Yellow-Green)
Weight	2.44 Kg (without HDD : 0.4~0.6Kg)
Dimensions	350(W) x 270 (D) x 60 (H) mm
Channel Storage	Each other Max. 4000 TV & Radio Channels

Please Note : The specification of the STB may be changed without notice in advance.

Specification :

Technical Specification

CPU	
Main CPU	STi5514/180 MHz
Front Control MPU	AT89S52/11.0592 MHz
Memory	
Flash Memory	4 MB
Graphics (MPEG) Memory	8 MB
System Memory	8 MB
Storage	
Removable HDD	Max. 120GB
Recording Time	40 Hr/80 GB (Changeable depending on bit rate)
Seagate (ST380012ACE/, 80GB) is the most recommendable to optimize the receiver's function.	

Trouble Shooting Guide :

➤ Trouble Shooting

If you suspect there is a fault with your receiver, please check the following trouble shooting guide before calling an authorized service agent.

Warning! Under no circumstances attempt to repair the receiver yourself. Tampering with the receiver may result in fatal electric shock and will invalidate your warranty.

Symptom	Possible cause
No display on the LED Display Panel	<ul style="list-style-type: none">• The power cord is not plugged in correctly.
No picture on the screen	<ul style="list-style-type: none">• Receiver is in Standby mode.• Scart Jack is not connected firmly to the video output port of television.• Incorrect channel or video output is selected on television.• Brightness level of your TV set is incorrectly defined.
No sound	<ul style="list-style-type: none">• The Scart & RCA cable are connected incorrectly.• The Volume level is low.• Muting function is active.

Trouble Shooting Guide :

➤ Trouble Shooting

Symptom	Possible cause
Poor Picture Quality	<ul style="list-style-type: none">• The level of Signal strength is low.
Receiver not responding to remote control unit	<ul style="list-style-type: none">• RCU batteries are dead or inserted incorrectly.• The RCU is pointing toward wrong direction.
Receiver is on but no picture or sound except the following messages (No signal, Locked channel, Not available)	<ul style="list-style-type: none">• Channel is not available.• Channel is locked.• Service installation not yet done.
No Signal	<ul style="list-style-type: none">• The level of Signal strength is low.• LNB is out of order.• The cable from the LNB is incorrectly connected.• The position of the dish is aligned incorrectly.
Settings you made in the menu have now changed	<ul style="list-style-type: none">• The receiver lost power before being able to enter into standby mode.• Some of the Settings saved by user can be deleted partly or fully.
No HDD or No HDD access	<ul style="list-style-type: none">• Check the jumper setting (Master or Single Drive)• Check whether HDD cartridge is correctly inserted

SAB EXPLORER

Made in Korea

00A6-NEE-00